


eyes³[®] APP

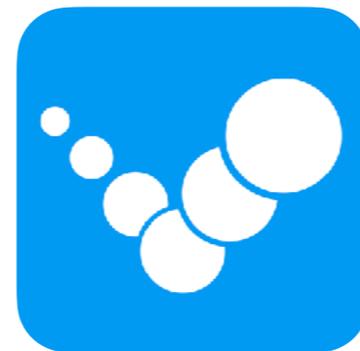


eyes³[®]

PHYSICAL SETUP

Table of Content	2-3
eyes ³ Mounting Options	4
eyes ³ Accessories	5
User Account	6
eyes ³ CAMERA - Recording Device	7
Recording Device Placement	8
Assign eyes ³ CAMERA Group	9
Recording Device Focus	10
Mount Recording Devices Securely	11
Internet Connectivity	12

Technical Support	13
Appendix - Recording Device Identification	14
Appendix - Auto Re-start APP	15
Appendix - Conserve Battery Life	16

Recording Devices with eyes³ APP installed can be mounted virtually anywhere around the Court as long as the Recording Device have an uncluttered view of the Court

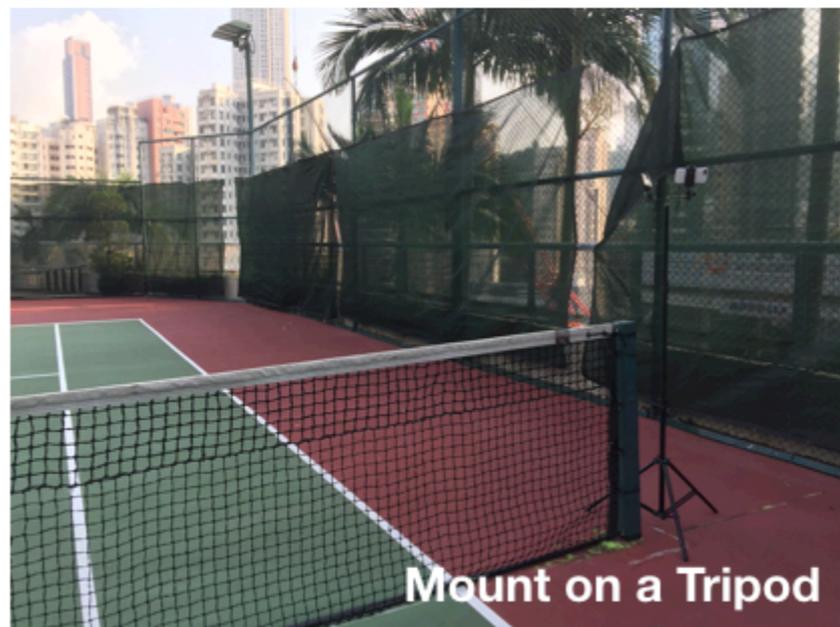

Accessories



Mount



Ballhead (with detachable base magnet)



External Battery



Mounting Kit
(Mount + Ballhead + Base Magnet)





Universal CLAMP




Sun-shade BOX



Once you have the eyes³ APP installed, you can sign up for an eyes³ account or log in to an existing eyes³ account.

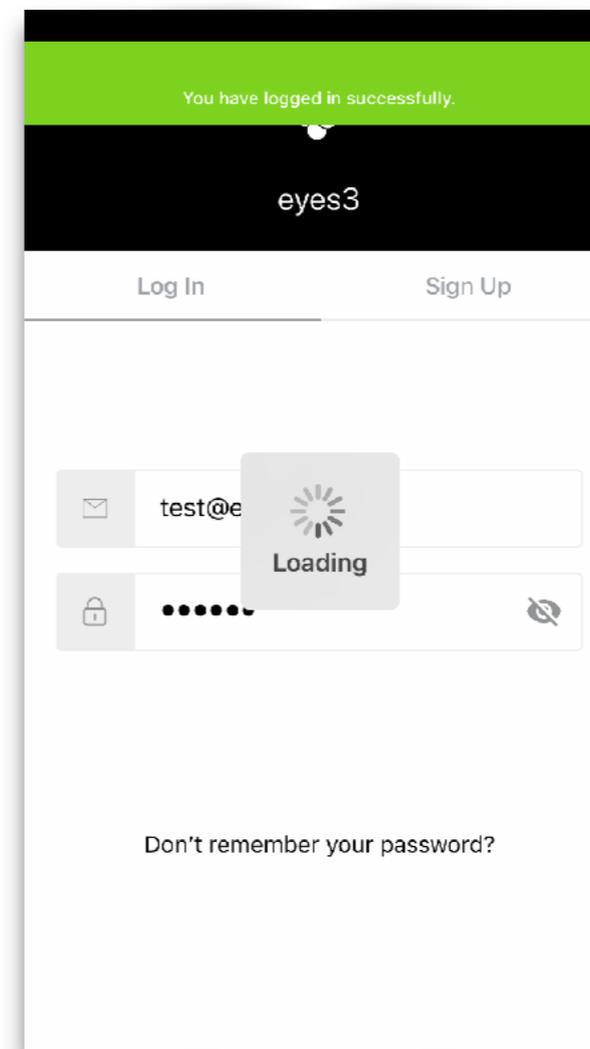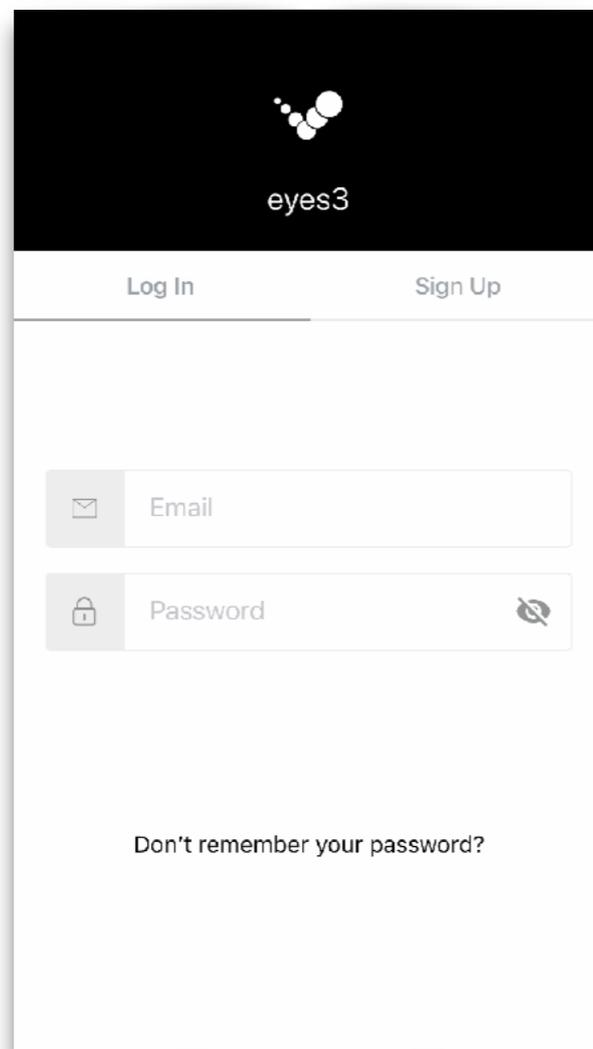


1. Place the Recording Devices around the Court (see Recording Device Placement)
2. Start eyes³ CAMERA and START Recording

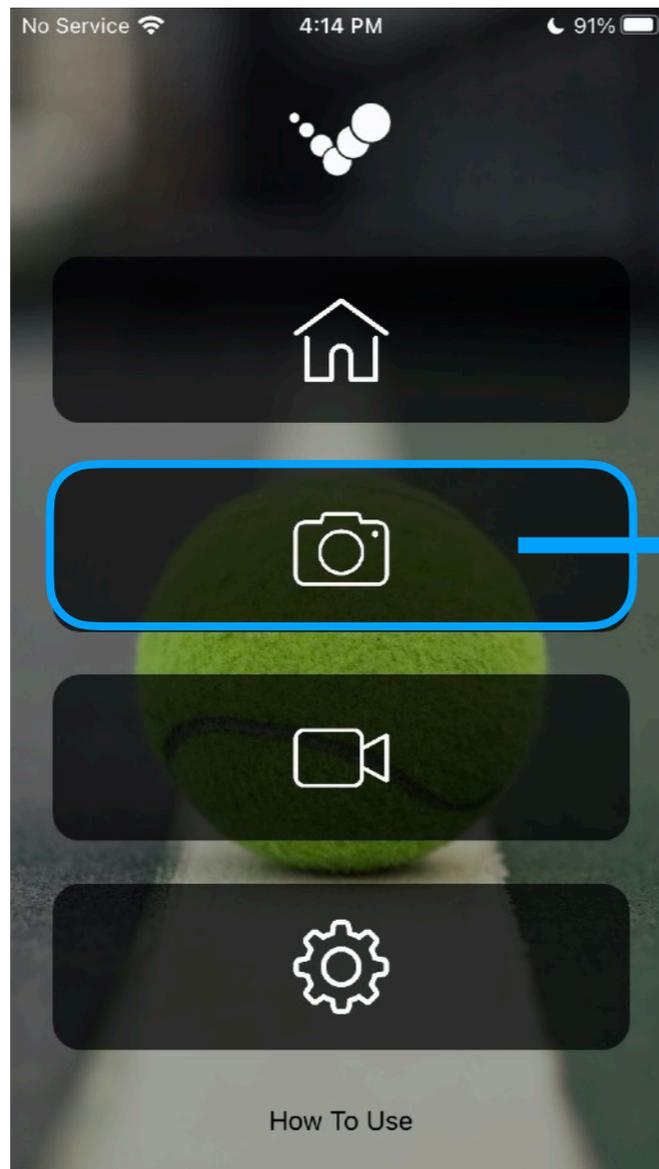




eyes³ CAMERA

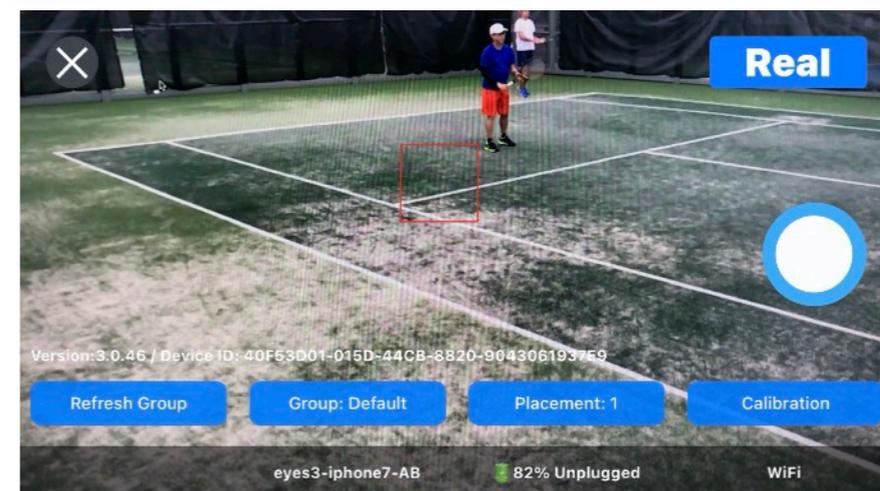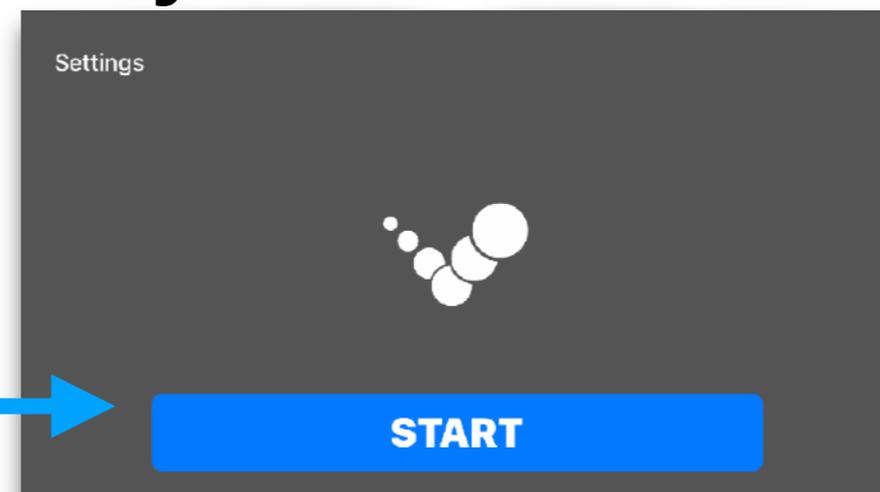

Typical Recording Device Placement with CAMERA view examples ensure the CAMERA view show the 4 corners that make up the 'No Man's Land' box

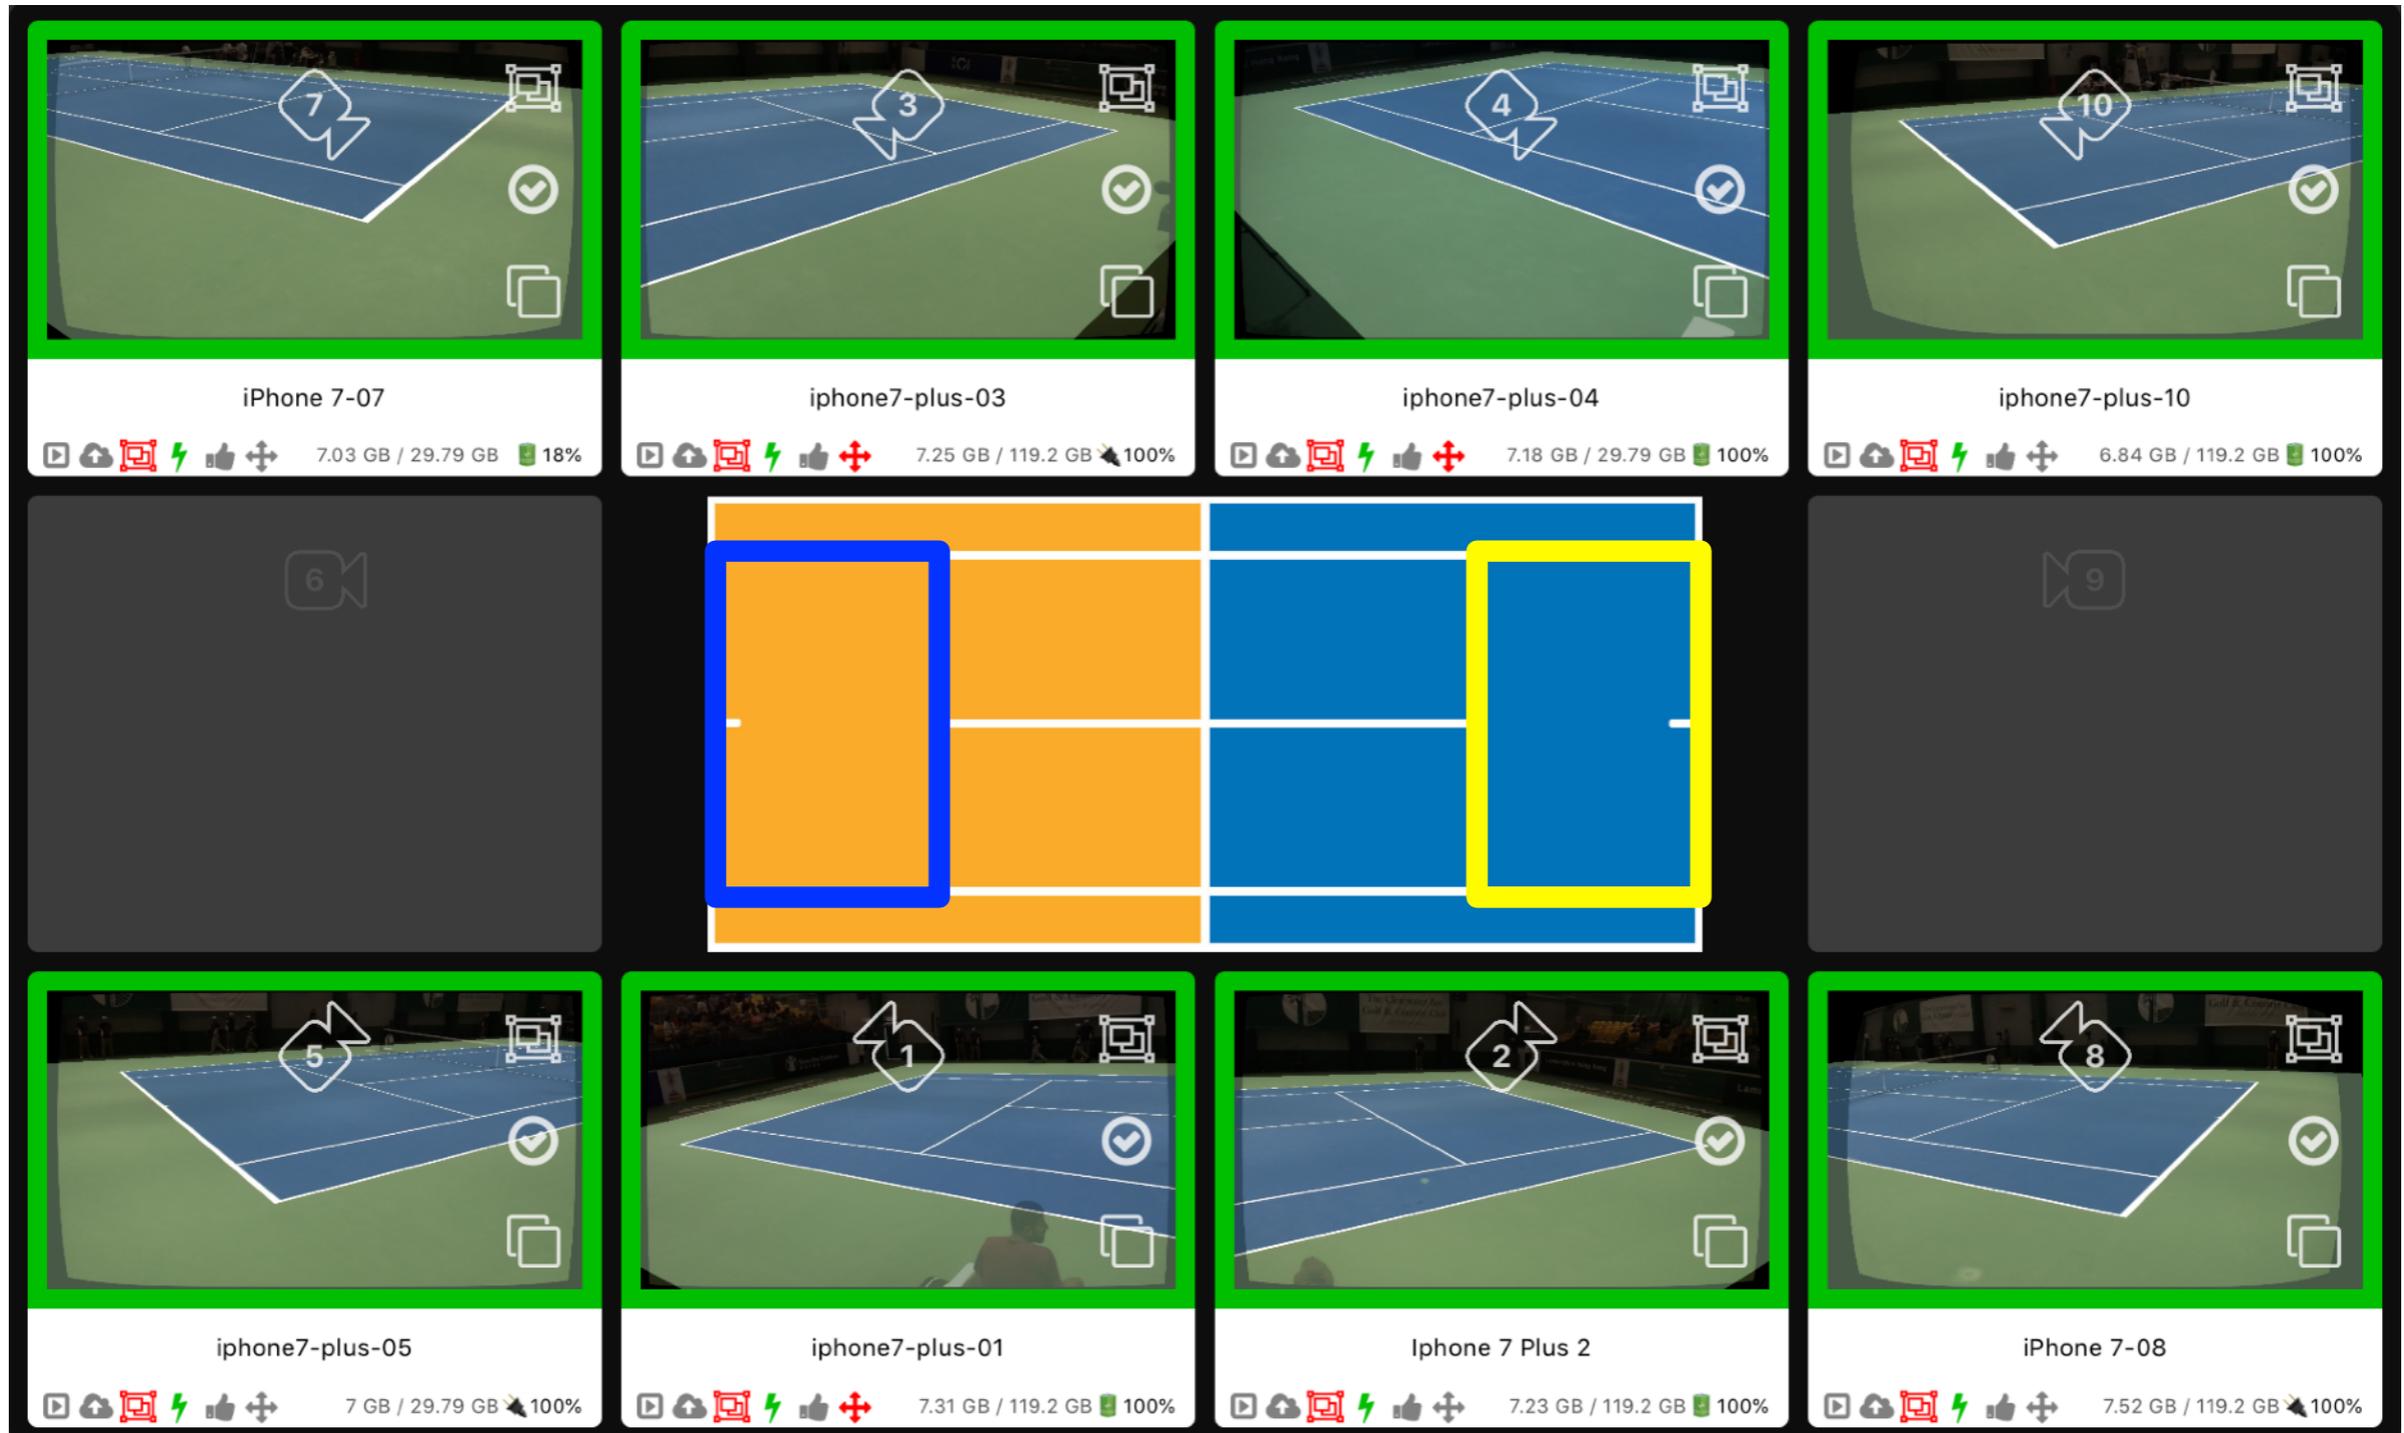

1. Physically place Recording Devices around the Court (see Physical Setup)
2. Create new CAMERA Group via MATCH Control (as required)
3. Assign “CAMERA Group”
 - 3.1.START Recording
 - 3.2.Assign GROUP; e.g. {Default}
 - 3.3.Identify the Recording Device’s CAMERA Placement; e.g. {10}

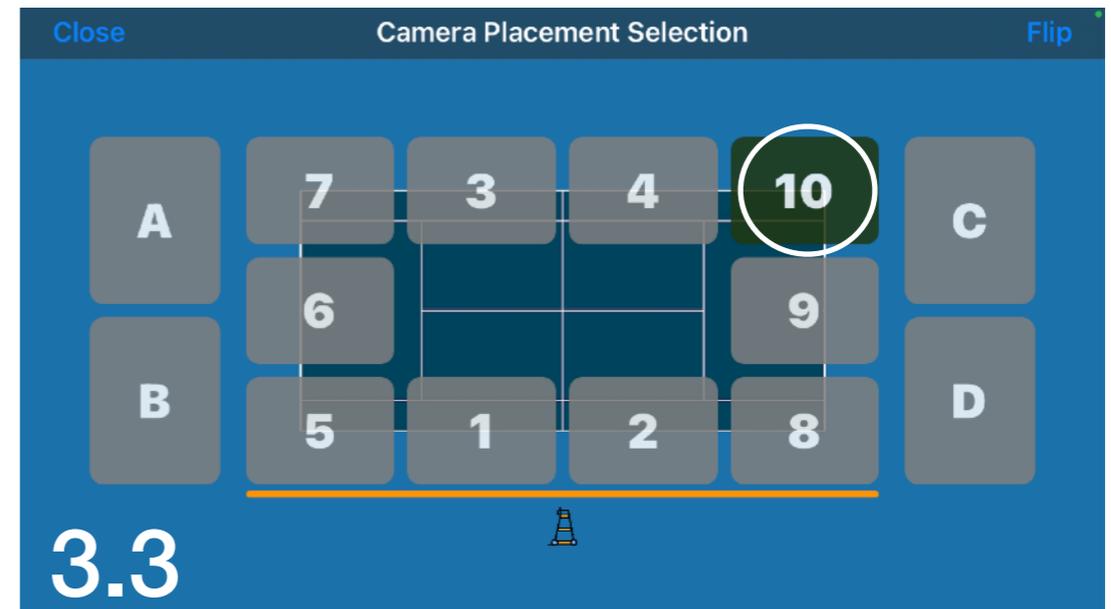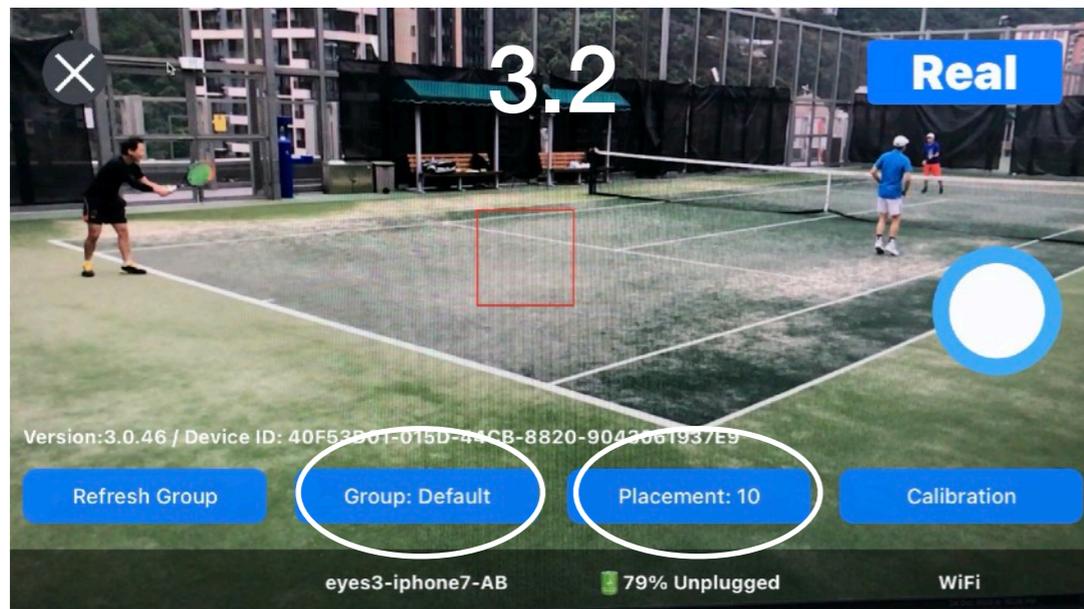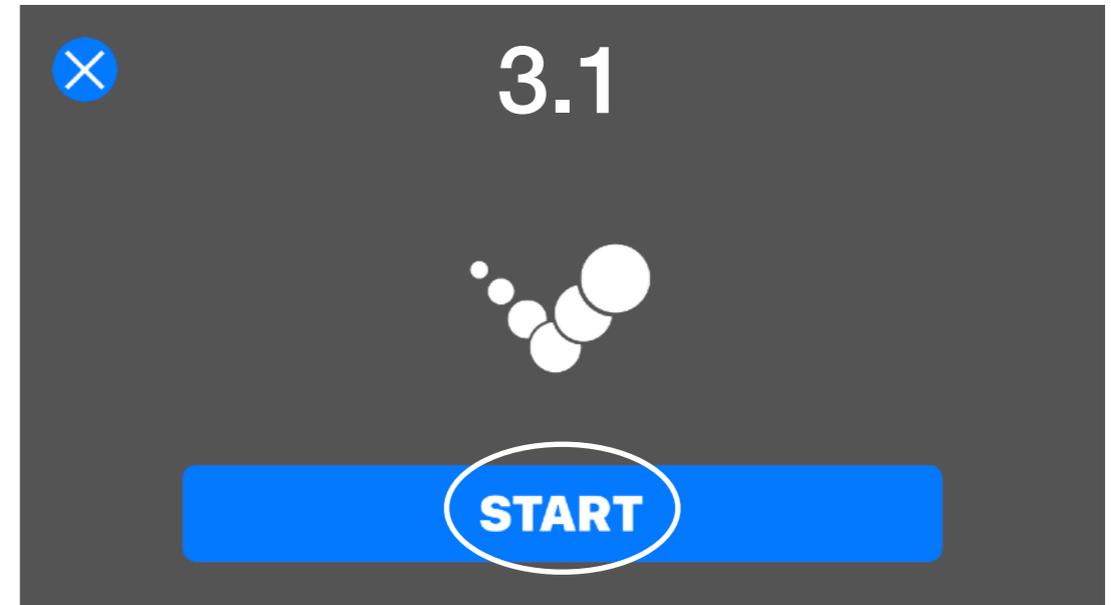

For best results, ensure that the recording image is correctly focused.

Touch the area to lock the camera focus (indicated by a green square). The square changes colour to red when focus lock is achieved.



Focusing



Focus Locked

It is imperative to ensure that the Recording Devices do not move during operation (this includes interference from players, spectators, etc., whether inadvertently or not). Any movement in the Recording Devices will result in a shift in the CAMERA perspective resulting in an out-of-CALIBRATION situation affecting the accuracy of the CHALLENGE Result.

The following procedures **must** be followed to minimise out-of-CALIBRATION situations:

- Ensure ALL moving parts of the Recording Device mounting accessories are securely fastened during the physical setup process
- Ensure that the Recording Devices are not interfered with during operation
- Investigate Recording Device movement alerts issued by eyes³ CONTROL, if any
- Monitor via the Snapshot + Verify functions the CALIBRATION status of each Recording Device via eyes³ CONTROL regularly, and re-CALIBRATE as required

eyes³ APP requires Internet connectivity to operate. All Recording Devices and eyes³ CONTROL Device must be connected to the Internet either via WI-FI or mobile broadband.

Performance of the system will depend heavily on the following:


- bandwidth and speed of the Internet connectivity
- stability of the Internet connectivity
- diversity of mobile broadband providers used by the Recording Devices (if mobile broadband is used)
- mobile broadband plan is active with adequate available data (i.e. not expired)

{tip} Test the Internet connectivity speed when appropriate.






If you encounter any issues, please contact your eyes³ Certified Trainer for assistance.

It is useful to identify the Recording Device/s that are placed around the Court.

{SETTINGS-GENERAL-ABOUT}
Recording Device NAME (user define-able)

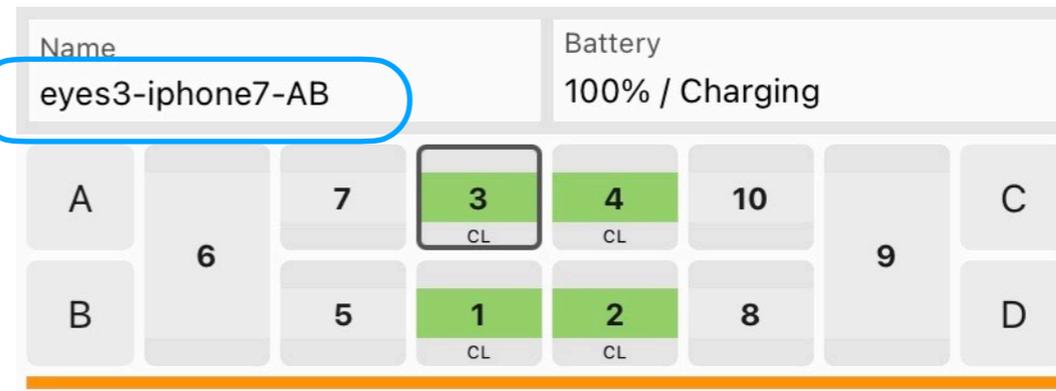


For operational efficiency, it is recommended that eyes³ CAMERA auto re-start function is enabled. This function enables eyes³ CAMERA to automatically re-start if necessary.

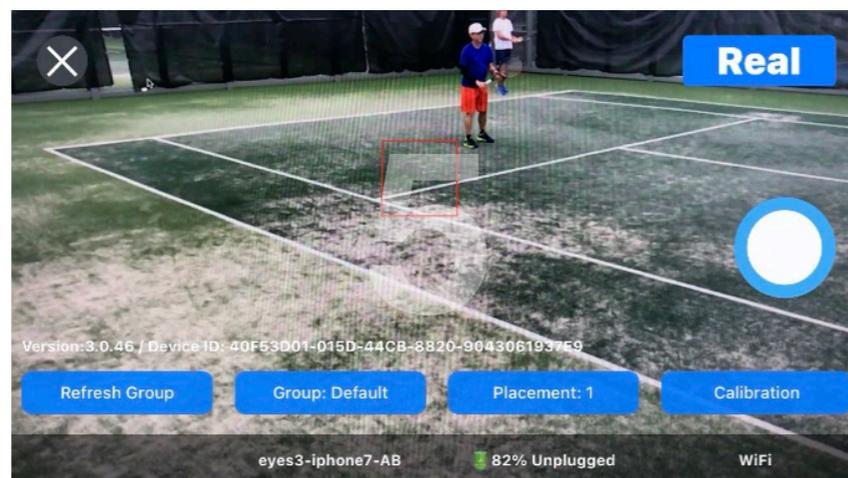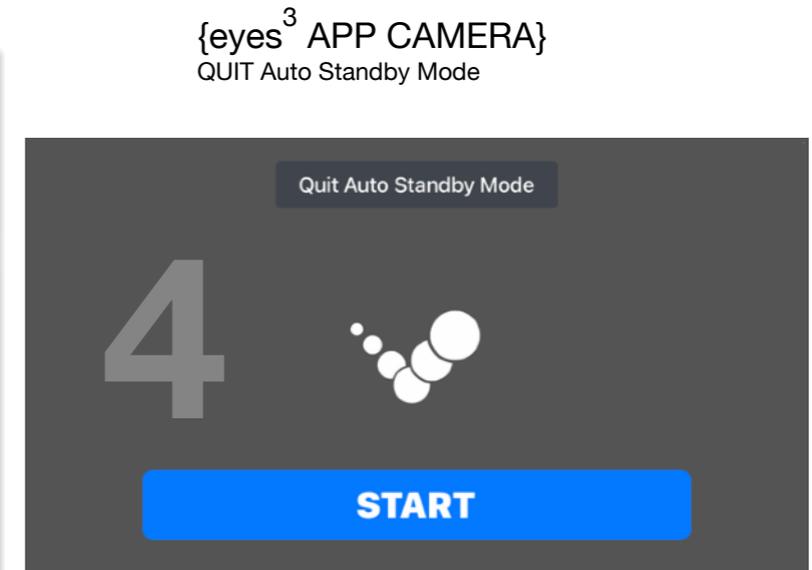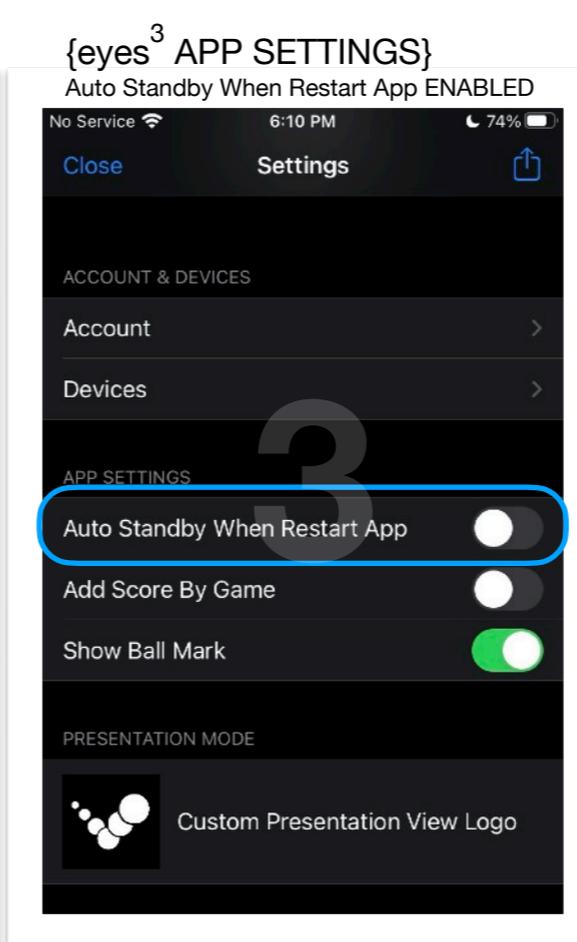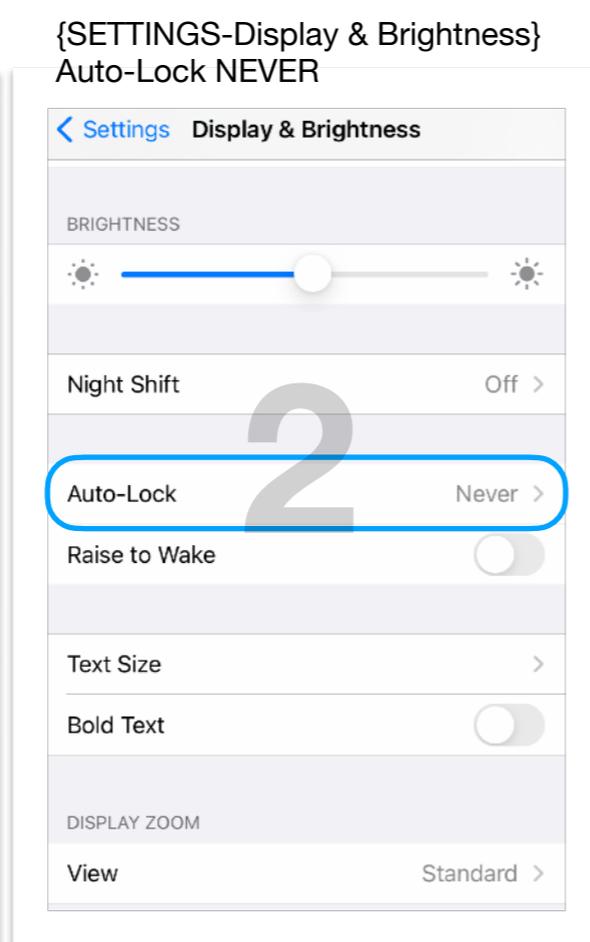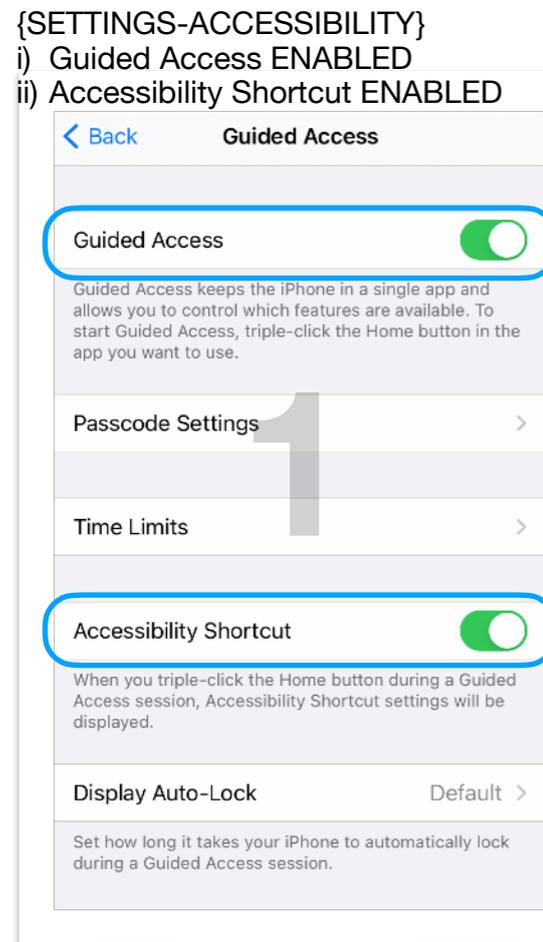

In eyes³ CAMERA recording mode:

1. press the Recording Device's Home Button three (3) times to START 'Guided Access'
2. repeat press the Recording Device's Home Button three (3) times to STOP 'Guided Access' {you will need the Recording Device's PIN to proceed}

To minimise battery drain, whenever the Recording Devices are not deployed or are being stored, certain settings in the Recording Devices are recommended; including the ones illustrated below.

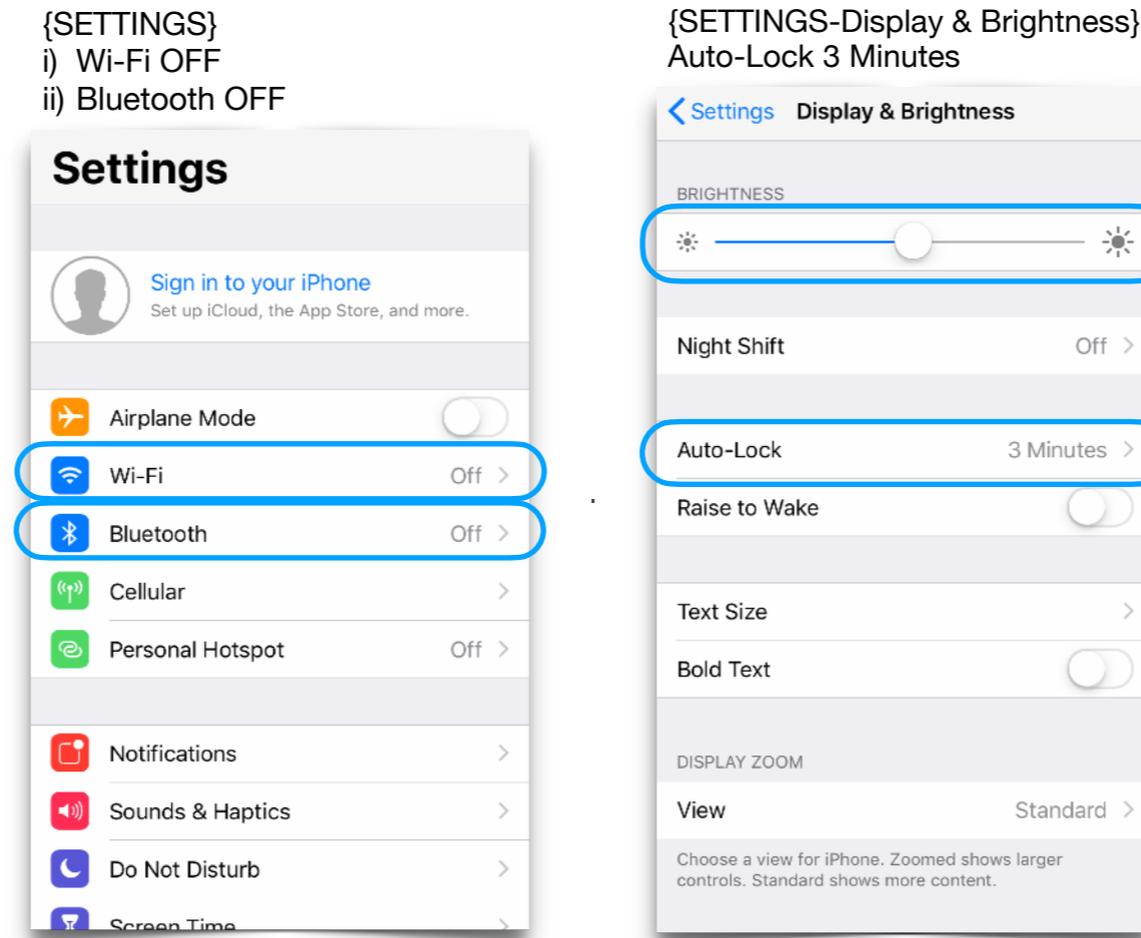

Avoid activating or running applications/functions that has a high battery drain, such as:

1. Screen on High Brightness
2. Always-on Screen Time (i.e. Auto-Lock set to NEVER)
3. Connectivity Setting ON (Wi-Fi, Bluetooth, Personal Hotspot, etc.)
4. Camera/Video Recording